

固件更新操作指南

⚠️ 注意事项

- **更新固件前请务必将镜头从相机上取下，否则可能损坏相机或镜头！**
- 更新过程中请勿断开镜头与电脑之间的连接。
- 更新过程中请勿关闭更新软件。
- 如果更新失败，请按照以下操作步骤尝试重新更新。如果反复更新仍不成功，请致电永诺售后服务中心 **400-001-3888** 或发送邮件 service@hkyongnuo.com 进行咨询。

📁 更新准备

1. 电脑
 2. 要更新的镜头
 3. **可传输数据**的USB连接线
 4. 下载升级文件并解压 (文件扩展名为.exe)
- 请登录永诺官网<https://www.hkyongnuo.com/xzyzc> 获取最新升级文件。

固件更新步骤

以下操作以YN85mm F1.8R DF DSM为例。

1. 关闭相机电源, 并从相机上取下镜头。

更新固件前请务必将镜头从相机上取下，否则可能损坏相机或镜头！



2. 双击打开下载好的升级文件。

 


3. 通过USB线将镜头连接到电脑。

当镜头连接正常时, 升级界面“设备信息”处将提示镜头信息。否则请重新连接。





4. 点击【更新】开始固件更新。

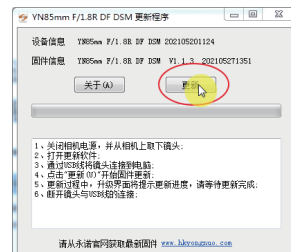

5. 更新过程中, 升级界面将提示更新进度, 请等待更新完成。

  当固件更新成功时, 升级界面上将提示“更新完成 谢谢使用”。

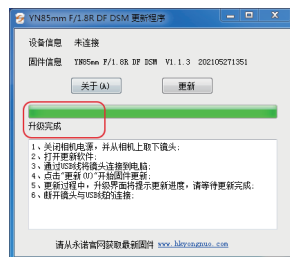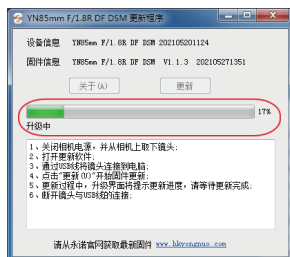

6. 断开镜头与USB线的连接, 重新装机。

7. 关闭相机电源并取出相机电池约10秒, 然后重新装入电池开机使用。

Firmware Upgrade Guide

⚠ Precautions

- Make sure the lens is removed from the camera before updating, otherwise the camera or lens may be damaged!
- During the upgrade, please don't disconnect the lens and computer.
- During the upgrade, please don't close the update software.
- If upgrade failed, please try to update again according to the operating steps below. If the upgrade failed again, please call 400-001-3888 or write email to service@hkyongnuo.com for help.

📁 Preparation

- 1.Computer
- 2.Lens to be updated
- 3.A USB connection cable capable of data transmission
- 4.Download the upgrade file and unzip it (File extension.exe)
Please visit website <https://www.hkyongnuo.com/xzyzc> to download the latest upgrade file.

Operation

 
 
The following operation takes "YN85mm F1.8R DF DSM" as an example.

1. Turn off the camera and take the lens down from the camera.

Make sure the lens is removed from the camera before updating, otherwise the camera or lens may be damaged!




2. Double-click to open the downloaded upgrade file.

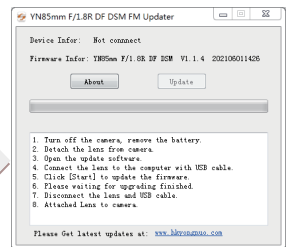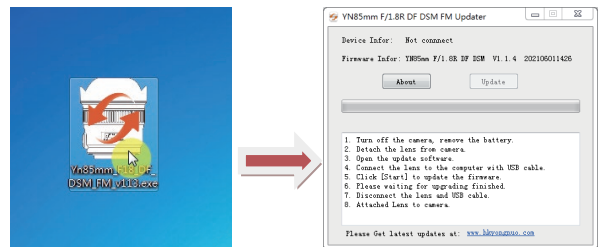


3. Connect the lens to the computer with USB cable.

 When the lens is connected normally, the upgrade interface will display lens information at "Device Infor". If not, please reconnect it.


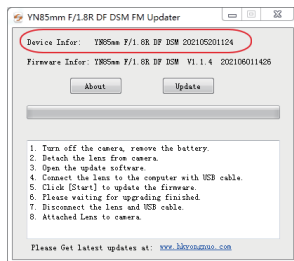


 4. Click [Start] to update the firmware.

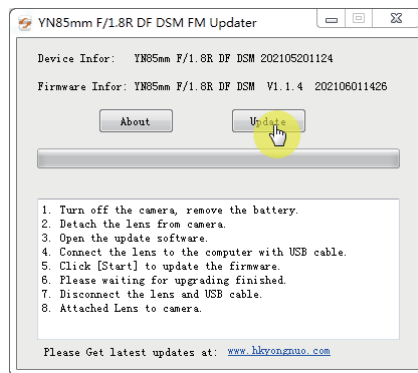

5. During the upgrade, the interface will display the update progress bar. Please wait for the completion of firmware upgrade.

  When the firmware upgrade is completed, the upgrade interface will display "updated successfully".

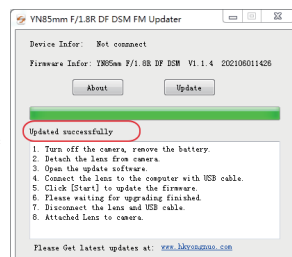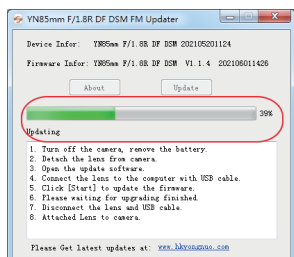

6. Disconnect the lens and USB cable, and use the lens with camera again.

7. After the firmware update is complete, turn off the camera and remove the battery for least ten seconds, Then reinsert the battery and reboot the camera.