Firmware Upgrade Guide

⚠Precautions

- Make sure the lens is removed from the camera before updating, otherwise the camera or lens may be damaged!
- During the upgrade, please don’ t disconnect the lens and computer.
- During the upgrade, please don’ t close the update software.
- If upgrade failed, please try to update again according to the operating steps below. If the upgrade failed again, please call 400-001-3888 or write email to service@hkyongnuo.com for help.

Preparation


1.Computer.
2.Lens to be updated.
3.A USB cable that can transmit data.
4.Download the upgrade file and unzip it (File extension “.mfu” or “.dfu”).
Please visit website https://www.hkyongnuo.com/xzyzc to download the lastest upgrade file.

Update steps


1. Turn off the camera and remove the lens from the camera. Connect the lens to the computer via a USB cable.






2. Find the USB flash drive named "DFU-MODE".
If you can't find it,
a. Please disconnect the USB cable, and then reconnect the lens and computer;
b. Please make sure that the USB cable you are using is a data cable, not just a charging cable.

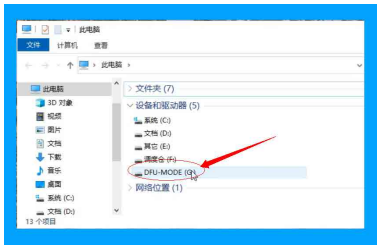

3. Open the ” INFO .TXT “ file on the USB flash drive and view the lens version.

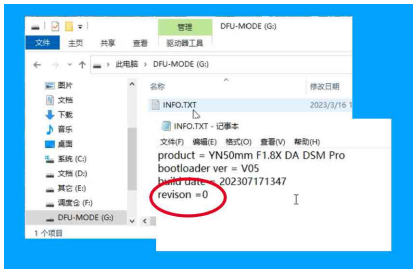

4. After confirming that the update is required, copy and paste the downloaded firmware file with the “.mfu” or “.dfu” extension to the root directory of the "DFU-MODE" disk.

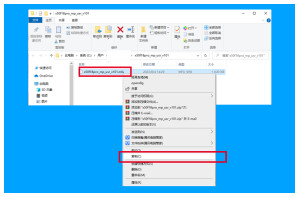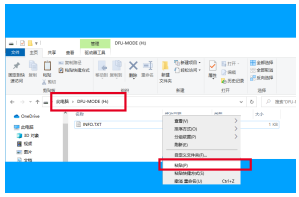5. Wait for the copy progress bar to prompt 100% completion and complete the upgrade.
After the progress shows 100%, please continue to wait for 30 seconds before disconnecting the USB connection to avoid the update failure.
If the upgrade fails, disconnect the USB cable and follow steps 1-5 above to reoperate.
If the operation is still unsuccessful, restart the computer and try again.

